


PART NUMBER LIST



TOOL BAG

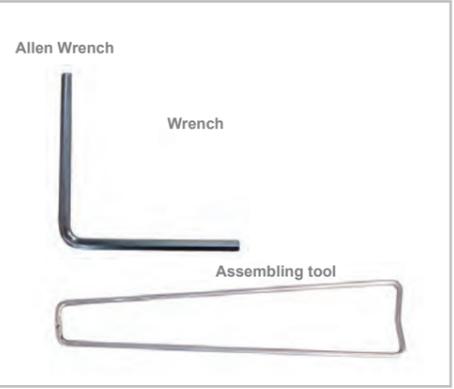

Insert the assembling tool into the rope as showed above



Connect the tool with the lower part of the holder



Push down the tool until the rope locks on the holder. Make a right turn of the tool and pull it out to finish the process as showed by the small picture.



Inset Tube 1 in Tube 2



Connect now two rails with an button head screw(18),two washers(19) (one on top side and the second one on bottom side) and secure them with a nat(20)



Repeat steps 5 to 12 to finish all six foot of the metal frame



Make the rope goes around from below of the holder. Make sure the metal part is underneath. Insert the assembling tool as showed by the small picture.



Connect the tool with the holder and push down until the rope locks on the holder.




Complete assembling the metal frame



Make the black rope go around the foot of the metal frame



Pull up the rope as showed above and hold the rope with metal part in the front

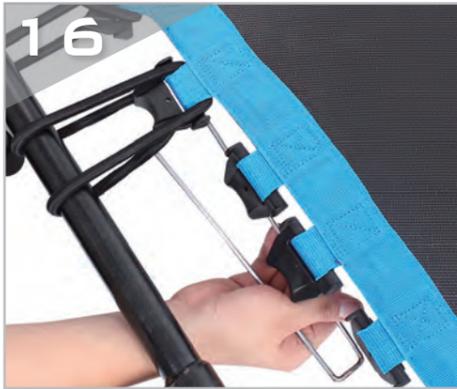

Take out the tool by simply make a right turn and pull.



Finish all six holders and ropes on one side.




Finish two sides opposite to each other



Make a counterclockwise turn of the ropes as showed above



Take the rope with one hand and connect it to the holder

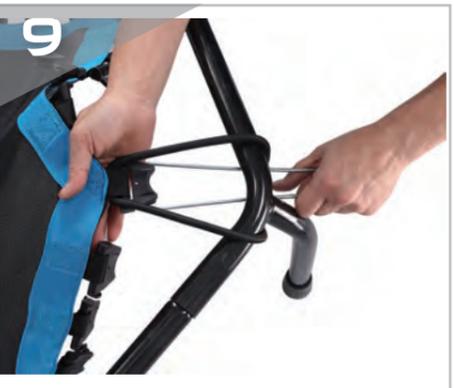

Make the rope go around to lock the holder. Make sure the rope goes between two raised parts of the holder.



Finish other two sides



Complete all six sides



Fix the Connection with four button head screws(11),four washer(12) and four spring washer(13)



Insert rubber cap to cover the screws.



Assemble completely .



Put the Rubber cap(9) on the T-bar and slide it in the upper handlebar. Fix the connection with washer(12) and three spring washer(13).



Insert handrail to the frame screw the knob to fixed the handrail.

TRAMPOLINES

INSTRUCTIONS
FOR USER



FINISH!