




Tool bag: assembling tool



Check if all the parts are included.

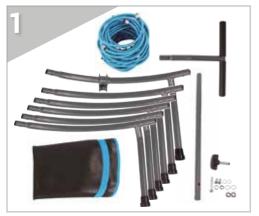

Hold 1 section of frame rail with one hand and insert another section as picture shown. Push ball pin when inserting the



Follow the previous step to complete the connection of all the frame rails.



Put the jumping mat in the center.



Put each band onto each leg tube.




Pull up the jumping mat to highest position. Now we are ready for the steps of assembling bungee cords.





Push down and rotate the tool inward to make the cord reach the holder. Pull out the tool by simply twisting it to the right side and pull it out.

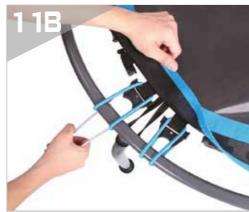

Step 11B is the 5th position.



Repeat step 7-10A and finish attaching cords Next, repeat step 7-10A to assemble the at position 3 on all six frame rails.



cords at 1st and 5th positions of holders on each section of frame rail. Step 11A is the 1st position.



1st and 5th positions of bungee cords assembly is completed.



Repeat step 7-10A to assemble the cords at 2nd and 4th positions of holders on each section of frame rail. Step 12A is the 2nd position.



Step 12B is the 4th position.



Bungee cord assembly is completed.



handrail tube.



Find the middle (3rd) position on frame rail, and start with the 1st bungee cord. One section of rail has handrail bracket.



Enclose the cord onto the holder, and make Make the tool go through the cord and lock it goes around the frame rail. The cord must one end of tool on the back of the holder. be fixed within the 2 raised parts of the holder.





Tighten the handlebar and the upper handraril with the adjustment knob.



Assembly of handrail is completed.




Insert the knob onto bottom of handrail tube.



Tighten the handrail (along with the knob) onto the handrail bracket.



Fix the handrail with the bolt (M8X50), inner washer (M8), and hex nuts (M8) by using Allen wrench and L shape wrench.

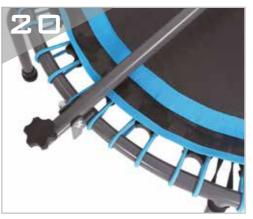

Notice that the handrail is foldable.



To fold the handrail, loosen the knob.



Assembly of trampoline is completd.



There are 4 positions of handrail for height adjustment. Loosing the adjustment knob and re-tighten it back to a suitable position.

FINISH!

TRAMPOLINES

I INSTRUCTIONS
FOR USER

